



HP PageWide XL Printer Series  
HP PageWide XL Pro Printer Series

Site Preparation Guide

© Copyright 2021 HP Development Company,  
L.P.

Edition 1

#### **Legal notices**

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statement accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

#### **Trademarks**

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corporation.

---

# Table of contents

<b>1 Overview</b> .....	<b>1</b>
Introduction .....	1
Site preparation information .....	1
Customer responsibilities .....	2
Installation time schedule .....	3
<b>2 Site preparation requirements</b> .....	<b>4</b>
Physical space requirements .....	4
Unloading route .....	4
Unpacking and moving the printer and/or accessories .....	5
Load bearing .....	7
Floor surface .....	8
Designing the optimal print production area .....	8
Environmental specifications .....	13
Ventilation and air conditioning .....	14
SmartStream minimum requirements for computer and software .....	14
RIP software requirements .....	14
Networking .....	15
Electrical requirements .....	15
Circuit breakers .....	15
Electrical configuration .....	17
Powerline disturbances .....	32
Grounding .....	32
<b>Appendix A Site preparation checklist</b> .....	<b>33</b>
Safety requirements .....	33
Site requirements .....	33
Electrical installation requirements .....	33
Electrical configuration requirements .....	34
Networking and computer requirements .....	34
Environmental requirements .....	34
Other requirements .....	35
Signature .....	35



---

# 1 Overview

## Introduction

This site preparation guide is a document specifying the configuration and characteristics needed for installing or moving the printer, which is done by your support representative.

The printer is supplied ready to use after installation. It is important to read the information provided in this guide thoroughly and to ensure complete compliance with all installation and operation requirements, safety procedures, warnings, cautions, and local regulations. A well prepared site makes for a smooth and easy installation.

---

**NOTICE:** This guide is only for the printer models listed below.

---

## Site preparation information

Provide information about which printers and accessories are involved in this installation.

Date of site preparation completion

Customer's name

### Printer

HP PageWide XL Pro 10000  
HP PageWide XL Pro 8200 MFP  
HP PageWide XL 8200 Printer  
HP PageWide XL Pro 5200 MFP  
HP PageWide XL 5200 MFP  
HP PageWide XL 5200 Printer  
HP PageWide XL 4700 MFP  
HP PageWide XL 4700 Printer  
HP PageWide XL 4200 MFP  
HP PageWide XL 4200 Printer  
HP PageWide XL 3920 MFP

### Accessories purchased on installation day

HP SD Pro 44-in Scanner  
HP HD Pro 42-in Scanner

HP PageWide XL Pro Stacker  
HP PageWide XL High-Capacity Stacker  
HP PageWide XL Drawer  
    1 extra  
    2 extra  
HP PageWide XL Top Stacker  
HP F70 Folder  
HP F70 Folder with tab applicator  
HP F60 Folder with tab applicator  
HP F40 Folder  
HP PageWide XL Folder Upgrade Kit  
HP PageWide XL Accessory Upgrade Kit  
HP PageWide XL Dryer  
HP Sheet Feeder  
HP PageWide XL PostScript/PDF Upgrade Kit  
HP PageWide XL 4100/4200 Speed Upgrade Kit  
HP SmartStream

## Customer responsibilities

The customer's responsibilities are summarized here and explained later in more detail.

You are responsible for preparing the physical site for the installation of the printer.

- Prepare the building's electrical system to meet the printer's requirements and the Electrical Code requirements according to the local jurisdiction of the country where the equipment is installed. See [Electrical requirements on page 15](#).



---

**NOTE:** Make sure that a certified electrician reviews the setup and configuration of the electrical system used to power the printer. See [Electrical requirements on page 15](#).

---

- Meet temperature and humidity requirements and ensure proper ventilation for the printer. See [Environmental specifications on page 13](#).
- Meet all requirements for software and networking. See [SmartStream minimum requirements for computer and software on page 14](#) and [Networking on page 15](#).
- Prepare the unloading route so that the printer can be unloaded and maneuvered into place. See [Unloading route on page 4](#).
- Ensure that the site specifications (space, doors, corridors, and so on) are suitable for the printer, its accessories if any, and its installation.

If you are unable to do any of these things, contact your support representative.

## Installation time schedule

Allow a minimum of three to four hours for the printer installation; depending on other factors, installation may take longer. Allow extra time for accessories.

The installer may require the help of another person to perform certain tasks during installation.

## 2 Site preparation requirements

### Physical space requirements

The printer requires enough space to reach the installation site, and enough space at the site for normal operation after installation. The floor underneath it must meet certain requirements.

### Unloading route

The route between the unloading area of the printer and the installation site, including any corridors and doorways through which the printer must be transported, is important to proper site preparation; its dimensions must be checked before the arrival of the printer.

This pathway must be clear when the printer arrives.

#### Printer physical specifications with packaging

	Pro 10000/8200 printer series	8200 printer series	Pro 5200 printer series	5200/4700/4200/3920 printer series
Width			2.30 m (90.6 in)	
Depth			1.07 m (42.1 in)	
Height			1.61 m (63.4 in)	
Weight	630 kg (1389 lb) *	577 kg (1272 lb)	549 kg (1210 lb) *	476 kg (1049 lb) *

\* Add 40 kg (88 lb) for an integrated stacker, and 25 kg (55 lb) for an integrated scanner.

#### Printer physical specifications without packaging or covers

	Pro 10000/8200 and 8200 printer series	5200/4700//4200/3920 printer series
Width		1.96 m (77.2 in)
Depth		0.80 m (31.5 in)
Height	1.64 m (64.6 in)	1.41 m (55.5 in)

#### Accessories physical specifications with packaging

	Dimensions	Weight
Top stacker	1.61 × 0.904 × 0.76 m (63.4 × 35.6 × 29.9 in)	80 kg (176 lb)
High-capacity stacker	1.51 × 1.2 × 0.81 m (59.4 × 47.2 × 31.9in)	145 kg (320 lb)
Pro stacker	1.50 × 1.2 × 0.87 m (59.1 × 47.2 × 34.3 in)	155 kg (342 lb)
F60 or F70 folder	1.85 × 1.4 × 1.05 m (72.8 × 55.1 × 41.3in)	365 kg (805 lb)

### Accessories physical specifications with packaging (continued)

	Dimensions	Weight
Folder with tab applicator	2.18 × 1.4 × 1.07 m (85.8 × 55.1 × 42.1 in)	408 kg (899 lb)
F40 folder	1.85 × 1.07 × 1.22 m (72.8 × 42.1 × 48.0 in)	267 kg (589 lb)
Dryer	1.58 × 0.57 × 0.61 m (62.2 × 22.4 × 24.0 in)	30 kg (66 lb)
Sheet feeder	1.78 × 1.02 × 1.50 m (70.1 × 40.2 × 59.1 in)	260 kg (573 lb)

For the specifications without packaging, see [Load bearing on page 7](#) and [Designing the optimal print production area on page 8](#).

Doorways: Minimum width 0.8 m (31 in) without packaging, or 1.1 m (44 in) with packaging. Minimum height 1.8 m (71 in).

To move the packaged printer through a corridor with a right-angled bend, the width of the corridor must be at least 2 m (79 in); or 1.35 m (53 in) if you remove the packaging, the accessory hooks, and the basket.

The printer and/or accessories can be moved on the pallet up or down a ramp of no more than 10° inclination.

## Unpacking and moving the printer and/or accessories

Unpacking the printer requires a certain amount of space, depending on whether or not a forklift is used.


You are strongly recommended to unpack the printer where it will be used, or as close to that destination as possible.

 **IMPORTANT:** The printheads should never be moved inside the printer, they should always be moved in their original packaging and installed at the final location.

### Without forklift

The space required by the packaged printer, plus:


- 6 m (20 ft) at one end for the accessory ramp (not provided by HP)
- 1 m (3 ft) at the other end for unscrewing

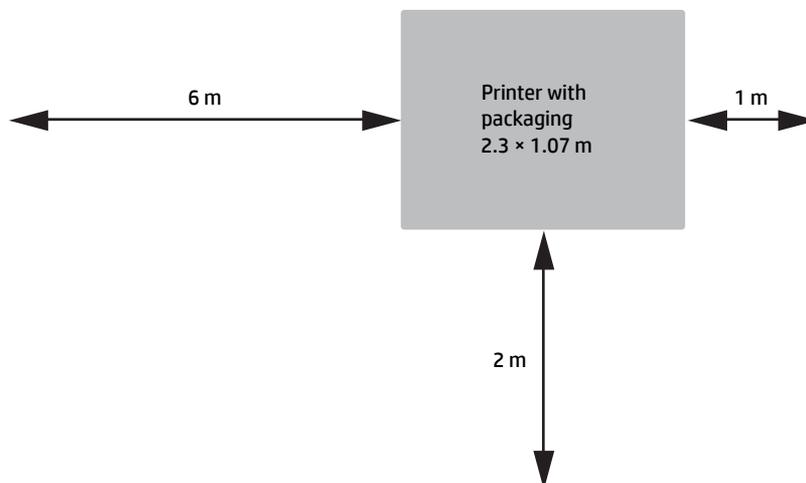

## With forklift

The space required by the packaged printer, plus:

- 3 m (10 ft) at one end for ramps and moving the printer off the pallet
- 1 m (3 ft) at the other end for unscrewing
- 2 m (7 ft) at the front for the forklift

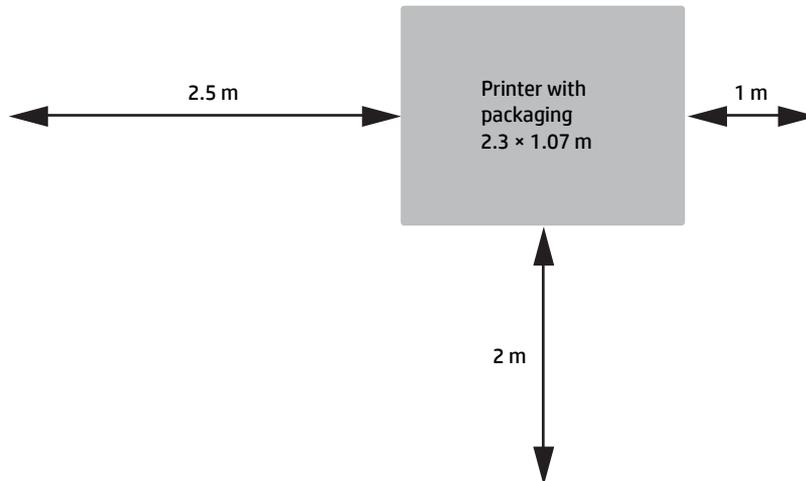


### Forklift specifications

	Short-side handling	Long-side handling
Weight	2000 kg (4400 lb)	
Fork length	1.8 m (71 in)	1.2 m (47 in)
Fork width (external)	500–700 mm (20–28 in)	900–1000 mm (35–39 in)
Forklift height	80 mm (3.1 in)	

To unpack any folder, you need the space required by the packaged folder, plus 2.5 m (8 ft) at the front and 1 m (3 ft) at each side.

Unpacking the folder

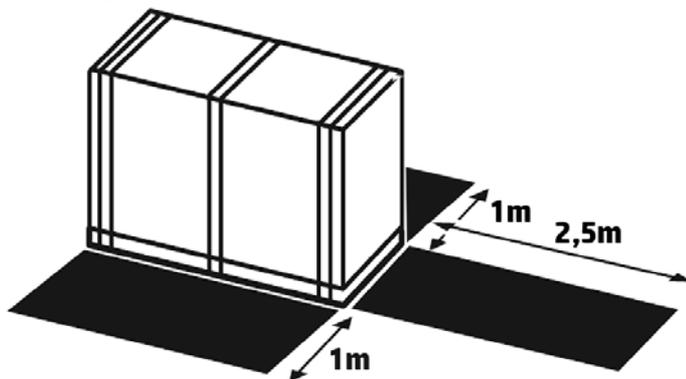

To unpack the high-capacity stacker or pro stacker, you need a clear area of 4.2 × 3.5 m (14 × 12 ft).

To unpack the dryer, you need the space required by the packaged dryer, plus 2.5 m (8 ft 2 in) at the front and 1 m (3 ft 3 in) at each side.

 **NOTE:** If installing the printer and any accessories at the same time, HP recommends installing first the printer and then each accessory, taking into account the space required to install each of them.

## Other considerations

If you need to move the printer after unpacking, take into account the following considerations.

- **Ground installation:** The printer can be moved on wheels up or down a ramp of no more than 12% or 7° inclination.
- **Above-ground installation:**
  - Use an elevator if the printer can fit inside it while remaining horizontal, and if it can support the printer's weight.
  - Otherwise, contact your support representative.

 **CAUTION:** The printer locks must remain on the printer when moving it.

**CAUTION:** Unloading and moving the printer and all system components is the customer's responsibility and not HP's. Failure to provide the required moving and lifting equipment could result in personal injury or printer damage during installation.

**CAUTION:** The printer is heavy and can easily fall over. Moving the printer over a ramp or tilted floor increases the risk. Move the printer smoothly, maintain safety precautions for people in the vicinity, and secure the printer against overbalancing. Always move it parallel to its length.

## Load bearing

Any floor on which the printer rests, even temporarily, must be capable of bearing its weight. To calculate the load-bearing characteristics of the floor, you must consult a structural engineer.

 **NOTE:** The printer may weigh up to 800 kg (1764 lb), depending on the configuration.

### Weight of printer components

Pro 10000/8200 printer series (with one empty drawer)	527 kg (1162 lb)
Pro 5200 printer series	490 kg (1080 lb)
8200 series printer	448 kg (988 lb)
5200/4700/4200/3920 printer series with scanner	412 kg (908 lb)
5200/4700/4200/3920 printer series without scanner	382 kg (841 lb)
One empty drawer	50 kg (110 lb)
One full drawer	86 kg (190 lb)
F70 folder without packaging	310 kg (683 lb)
F70 folder with packaging	365 kg (805 lb)
F70 folder with tab applicator, without packaging	360 kg (793 lb)
F70 folder with tab applicator and packaging	410 kg (904 lb)
F60 folder without packaging	360 kg (794 lb)
F60 folder with packaging	410 kg (904 lb)
F40 folder	247 kg (545 lb)
Pro stacker (empty)	130 kg (287 lb)
Pro stacker (with full tray)	243 kg (536 lb)
High-capacity stacker (empty)	107 kg (236 lb)
High-capacity stacker (with full tray)	220 kg (485 lb)

### Weight of printer components (continued)

Top stacker (empty)	40 kg (88 lb)
Top stacker (with full tray)	50 kg (110 lb)
Sheet feeder (empty)	200 kg (441 lb)
Sheet feeder (with full tray)	220 kg (485 lb)
Dryer	24 kg (53 lb)
Output support (each)	0.72 kg (1.6 lb)

## Floor surface

The printer needs a suitable floor surface.

It should have the following characteristics:

- Flat, horizontal surface
- Solid, smooth, and level
- No holes or indentations
- Static-free surface (carpet not recommended)
- Easy to clean
- Durable
- Free from floor vibration: for example, floor vibration is likely near a railway station, press machine room, construction site, or heavy industry.

If such vibration cannot be avoided, suitable floor preconditioning to mitigate vibration may be needed for optimal printer performance.

## Designing the optimal print production area

After installation, the printer needs enough space for normal operation.

Normal operation includes the following tasks:

- Print
- Replace a paper roll
- Load a rigid sheet (pro printers only)
- Service the printer or replace printer components

The height of the room should be at least 2.5 m (8.2 ft).

### Printer physical specifications


	Pro 10000/8200 printer series	Pro 5200 printer series	8200 printer series	5200/4700/4200/3920 printer series
Width	1955 mm (76.97 in)			
Depth without paper input and output accessories	785 mm (30.91 in)			

Printer physical specifications (continued)


	Pro 10000/8200 printer series	Pro 5200 printer series	8200 printer series	5200/4700/4200/3920 printer series
Depth with paper input and output accessories	957 mm (37.68 in)			
Depth	785 mm (30.91 in)			
Depth with basket folded	991 mm (39.02 in)			
Depth with basket unfolded	1266 mm (49.84 in)			
Height with front panel	1637 mm (64.45 in)	1414 mm (55.67 in)	1637 mm (64.45 in)	1414 mm (55.67 in)

When operating, the printer requires the following amount of space, depending on the printer model and any accessories in use.


Pro 10000/8200/5200 printer series

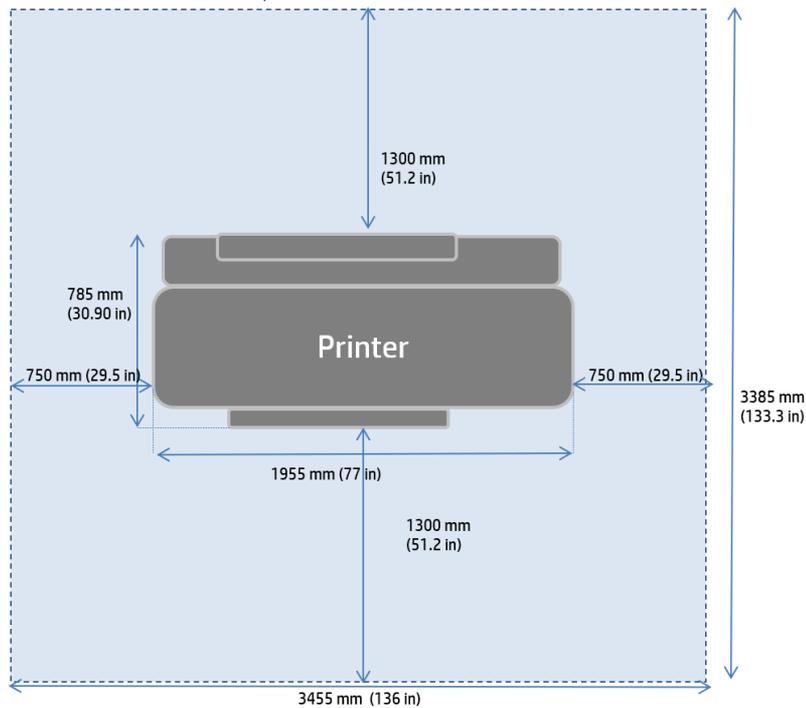

8200/5200 printer series

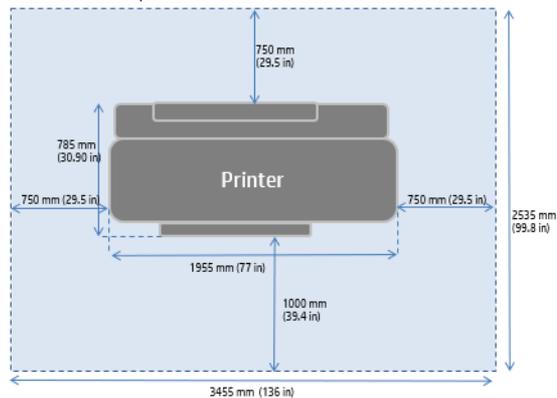


4700/4200/3920 printer series

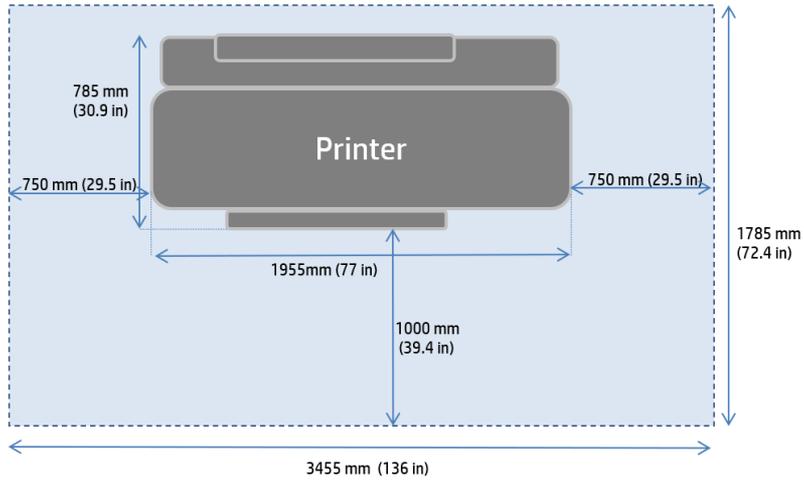


If the printer is placed against a wall, the power socket in the wall must not be behind the printer.

The printer's power socket and other sockets are located at the rear of the printer, on the opposite side from the front panel.

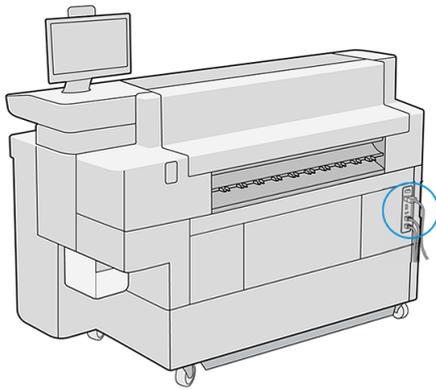





Printer with high-capacity stacker

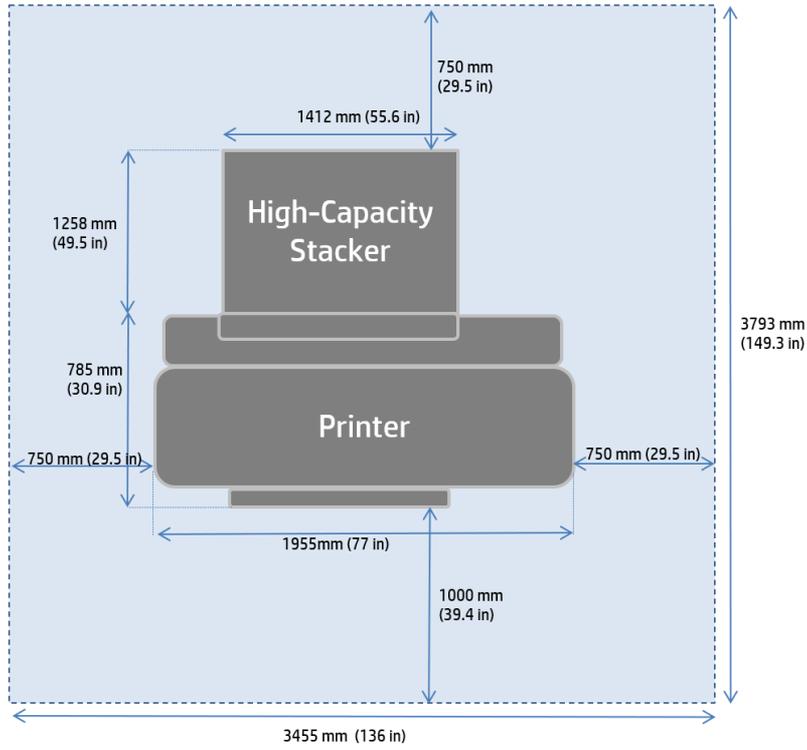

Printer with pro stacker

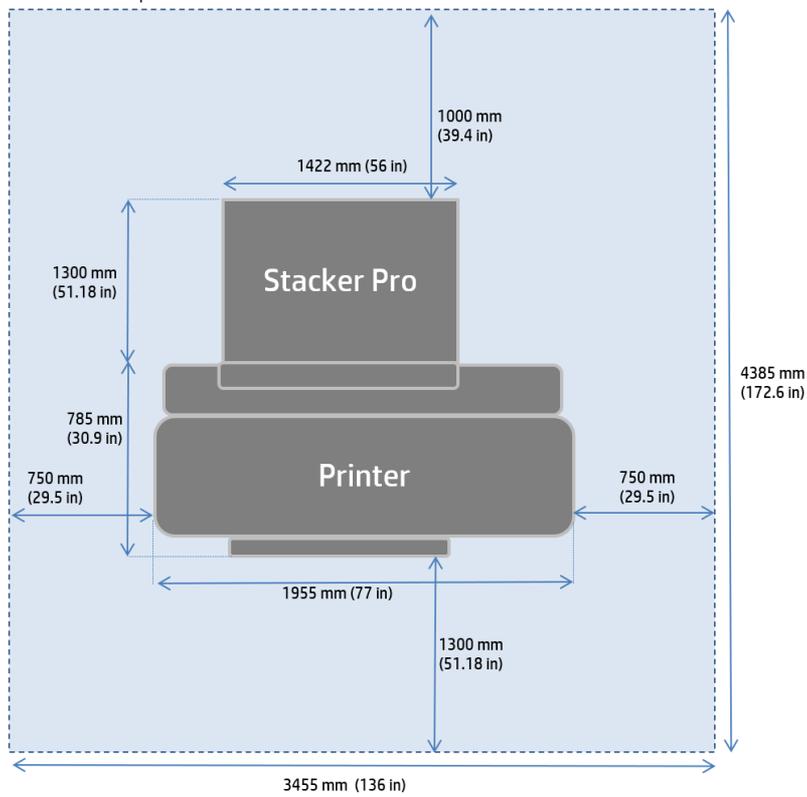

Printer with pro stacker and sheet feeder

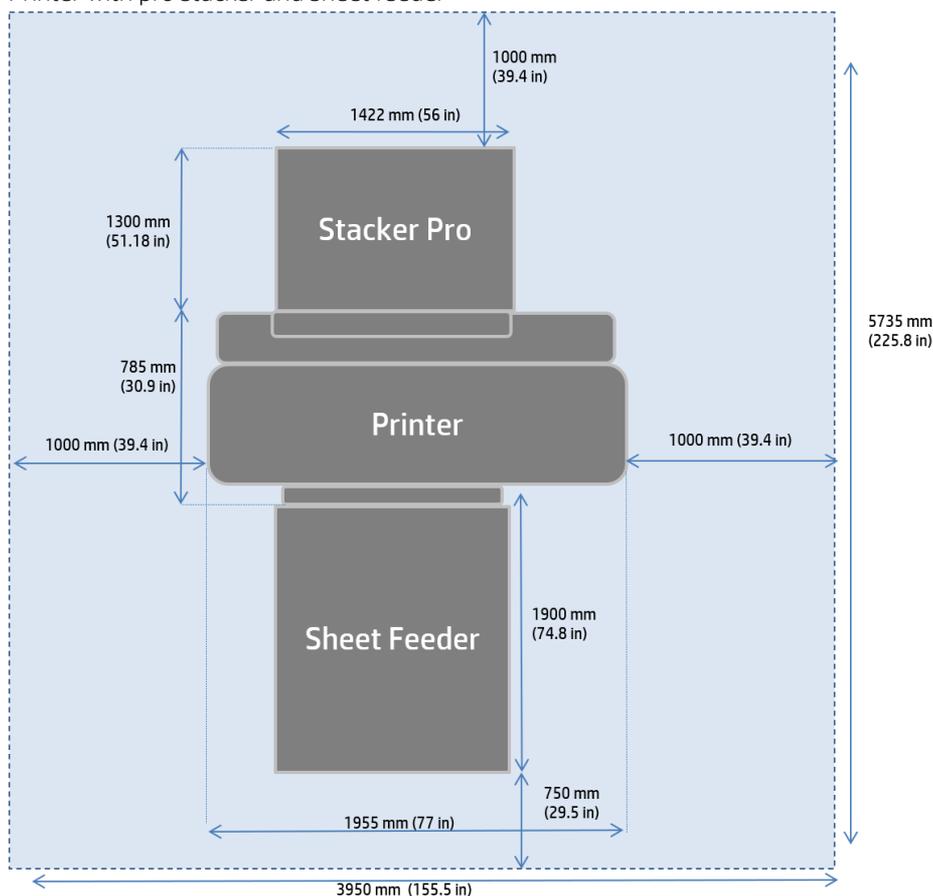

**TIP:** When using a folder or stacker, take care to keep the printer's power cord clear of the folder or stacker wheels, which could damage it.

## Environmental specifications

These environmental conditions must be kept within the specified ranges to ensure the correct operation of the printer. Failure to do so may cause print-quality problems or damage sensitive electronic components.

### Printer environmental specifications

Temperature during installation	15 to 35°C (59 to 95°F)
Operating temperature	5 to 40°C (41 to 104°F)
Recommended operating temperature for best performance	15 to 35°C (59 to 95°F), depending on paper type
Storage and reshipping temperature	-25 to 55°C (-13 to 131°F)
Printhead storage and reshipping temperature	5 to 40°C (41 to 104°F)
Recommended operating humidity	20 to 80% RH, depending on paper type
Storage humidity	< 90% RH

**NOTE:** The printer must be kept indoors.

**NOTE:** If the printer or ink cartridges are moved from a cold location to a warm and humid location, water from the atmosphere can condensate on the printer parts and cartridges and can result in ink leaks and printer errors. In this case, HP recommends that you wait at least 3 hours before turning on the printer or installing the ink cartridges, to allow the condensate to evaporate.

In addition to controlling the temperature, humidity, and temperature gradient, there are other environmental conditions that must be met during site preparation:

- Do not install the printer where it will be exposed to direct sunlight or a strong light source.
- Do not install the printer in a dusty environment. Remove any accumulated dust before moving the printer into the area.

## Ventilation and air conditioning

As with all equipment installations, to maintain ambient comfort levels, air conditioning and ventilation in the work area should take into account the amount of heat produced by the printer.

The printer's maximum power dissipation is 2.8 kW for 8200 printers (and 5200 MFP printers sold in Asia-Pacific and Japan), and 1.2 kW for the others. Air conditioning and ventilation should meet local environmental, health, and safety (EHS) guidelines and regulations. The Safety Data Sheets for the consumables identify ink ingredients (<http://www.hp.com/go/msds>), and adequate ventilation needs to be provided to ensure that potential airborne exposures to these and the paper-derived substances are adequately controlled. Consult your usual air conditioning or EHS specialist for advice on the appropriate measures for your location.

For a more prescriptive approach to adequate ventilation, you could refer to the ANSI/ASHRAE (American Society of Heating, Refrigerating and Air-Conditioning Engineers) 62.1-2007 Ventilation for Acceptable Indoor Air Quality. As an example, a minimum exhaust rate of 2.5 L/s.m<sup>2</sup> (0.5 cfm/ft<sup>2</sup>) of fresh air for "copy, printing rooms" is specified.

---

 **NOTE:** The ventilation and air conditioning units should not blow air directly onto the printer.

 **NOTE:** Maintaining positive air pressure in the print production room will help prevent dust from entering the room.

---

## SmartStream minimum requirements for computer and software

Check whether your computer can support SmartStream print management software.

---

 **NOTE:** The SmartStream software is optional.

---

- Intel Core i3 2.4 GHz with 4 virtual cores/threads
- 4 GB of RAM
- 3.5 GB of free space on hard disk, plus 100 MB for each additional printer added
- Screen resolution of 1280 × 1024 pixels, tuned or calibrated to sRGB for optimal HP Crystal Preview performance
- Ethernet, IPv4, 100 Mb/s
- Microsoft Windows 7, 8, 8.1, or 10 (64-bit only)

## RIP software requirements

Check whether your computer can support your chosen RIP software.

---

 **NOTE:** RIP software is optional.

---

To send print jobs to your printer, you may decide to use Raster Image Processor (RIP) software, which should be run on a separate computer. RIP software is available from various different companies.

Each RIP has specific requirements. Check with your RIP vendor to find out the requirements for the computer that you will use for the RIP station. See <http://www.hp.com/go/designjetrips> for a complete list of certified RIP stations available for this printer. Make sure that the RIP station is fully functional and ready for installation.

## Networking

A local area network must be ready and working by the time of installation.

You are responsible for all networking requirements, and you must complete the following tasks:

- Have a Gigabit Ethernet LAN ready for the day of installation.
- Provide CAT-6 LAN cables to connect the printer and workstations to your LAN.

---

 **NOTE:** In order to perform remote support, the printer must have access to the Internet using the LAN connection.

---

To use all the features of your printer, it must be connected to the Internet. If a proxy is needed in order to access the Internet from your LAN, have the configuration details ready on the day of installation; they may include proxy server address and port. If in doubt, consult your IT manager for the proxy configuration details.

## Electrical requirements

Your printer requires some electrical components to be supplied and installed by the customer, according to the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

---

 **NOTE:** If the configuration of the building electrical system used to power the printer needs to be modified to meet printer requirements, an electrician is required. Make sure that your electrician is appropriately certified according to local regulations and supplied with all the information regarding the electrical configuration.

---

## Circuit breakers

Circuit breakers and power cords are required for the printer and accessories.

---

 **NOTE:** The circuit breakers must meet the requirements of the printer or folder and should be in accordance with the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.


---

Each device requires a power cord that meets the following requirements.

Dedicated line	Not required
Branch circuit breaker	2 poles, 16 or 20 A max depending on local laws and maximum load current
Residual current circuit breaker *	Required: 2 poles, 30 mA residual, at least 20 A capacity

\* Also known as Ground Fault Circuit Interrupter (GFCI).

Electrical configuration diagram (for reference only)  
Protective Earth (PE)  
conductor

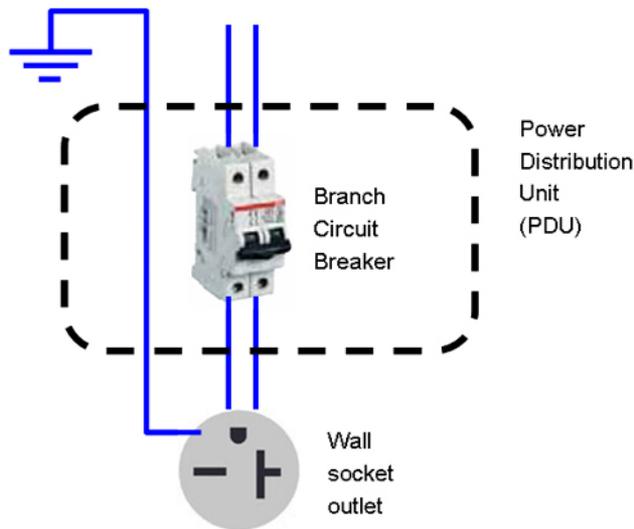

**NOTE:** The Power Distribution Unit (PDU) must be rated to meet the power requirements of the printer, and should be in accordance with the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

**WARNING!** Do not use a power strip (relocatable power tap) to connect the power cord.

#### Appliance coupler for 5200, 8200, and pro printer series (printer connection)

Appliance coupler (power cable)

Appliance coupler inlet (printer)

Detachable terminal as per IEC60320-1 C19 (squared type)

Detachable inlet as per IEC60320-1 C20 (squared type)



#### Appliance coupler for 3920, 4200, and 4700 printer series (printer connection)

Appliance coupler (power cable)

Appliance coupler inlet (folder)

Detachable terminal as per IEC60320-1 C13

Detachable inlet as per IEC60320-1 C14



**NOTE:** Place the wall receptacle close enough to the printer so the plug can be plugged and unplugged easily.

**NOTE:** The printer and the folder should be supplied with power from the same AC source.

## Electrical configuration

The electrical configuration depends on the model installed.

- [Pro 10000, pro 8200, and 8200 printer series](#)
- [Pro 5200 printer series](#)
- [5200 printer series](#)
- [5200 printer series with dryer accessory](#)
- [4700/4200/3920 printer series](#)
- [F40, F60, and F70 folders](#)

## Pro 10000, pro 8200, and 8200 printer series

The printer requires a suitable power supply and power cords.

Input voltage	~200–240 V $\pm$ 10%, two wires + PE
Input frequency	50/60 Hz
Maximum load current	8 A
Power consumption while printing	1.2 kW

### Wall receptacles and power cords

A power cord is provided with your printer, according to the printer's electrical specifications. Check that you have suitable wall sockets available.

If the power cord does not reach your PDU and/or UPS, a certified electrician must install suitable extension cables on the day of installation.

To make sure you have the right wall socket outlets (wall receptacles) ready for installation, check the following:

1. The wall socket outlets must be accessible to users of the device and within the range of the power cord.
2. The wall socket outlets must be suitable for **printer input ratings**. See [Electrical configuration on page 17](#).
3. The wall socket outlets must be suitable for the **power cord plug type** used in the country of installation. The table below gives examples of the power cords and the plugs provided with the printer according to the country. To make sure you have the right wall receptacle, find your country in the appropriate table and check the **plug type**.

**⚠ WARNING!** Use only use the power cord supplied by HP with the printer. Do not use a power strip (relocatable power tap) to connect both power cords. Do not damage, cut, or repair the power cord. With a damaged power cord, there is risk of fire and electric shock. Always replace a damaged power cord with an HP-approved power cord.

Country	HP part number	Length	Plug type	Plug
EU, Russia	8120-6352	2.5 m	CEE 7-VII	
Denmark	8121-1077	2.5 m	DK 2-5A	
Switzerland	8121-0916	2.5 m	SEV 6534-2 Type 12	

Country	HP part number	Length	Plug type	Plug
United Kingdom, Middle East	8121-0907	2.5 m	BS 1363/A (13A fused)	
Middle East	8121-6360	2.5 m	NEMA 6-20	
Israel	8121-1010	2.5 m	SI 32	
South Africa	8121-0915	2.5 m	SABS 164	
United States, Canada, Mexico	8120-6360	2.5 m	NEMA 6-20	
Brazil	8121-1101	2.5 m	NBR 14136	
Argentina	8121-0925	2.5 m	IRAM 2073	
Chile, Uruguay	8121-0923	2.5 m	CEI 23-50	
Australia, New Zealand	8120-6351	2.5 m	AS/NZS 3112	

Country	HP part number	Length	Plug type	Plug
India	8121-1074	2.5 m	IS 1293	
China	8121-0924	2.5 m	GB 1002	
Taiwan	8121-1033	2.5 m	CNS 690 Type 2(4)	
Japan	8120-6360	2.5 m	NEMA 6-20P	
Philippines, Thailand	8121-6360	2.5 m	NEMA 6-20P	
Vietnam, Cambodia, Korea, Indonesia	8120-6352	2.5 m	CEE 7-VII	
Singapore, Hong Kong	8121-0907	2.5 m	BS 1363/A (13A fused)	

## Pro 5200 printer series

The printer requires a suitable power supply and power cords.

Input voltage	~200–240 V ±10%, two wires + PE
Input frequency	50/60 Hz
Maximum load current	5 A
Power consumption while printing	0.9 kW

### Wall receptacles and power cords

A power cord is provided with your printer, according to the printer's electrical specifications. Check that you have suitable wall sockets available.

If the power cord does not reach your PDU and/or UPS, a certified electrician must install suitable extension cables on the day of installation.

To make sure you have the right wall socket outlets (wall receptacles) ready for installation, check the following:

1. The wall socket outlets must be accessible to users of the device and within the range of the power cord.
2. The wall socket outlets must be suitable for **printer input ratings**. See [Electrical configuration on page 17](#).
3. The wall socket outlets must be suitable for the **power cord plug type** used in the country of installation. The table below gives examples of the power cords and the plugs provided with the printer according to the country. To make sure you have the right wall receptacle, find your country in the appropriate table and check the **plug type**.

**⚠ WARNING!** Use only use the power cord supplied by HP with the printer. Do not use a power strip (relocatable power tap) to connect both power cords. Do not damage, cut, or repair the power cord. With a damaged power cord, there is risk of fire and electric shock. Always replace a damaged power cord with an HP-approved power cord.

Country	HP part number	Length	Plug type	Plug
EU, Russia	8120-6352	2.5 m	CEE 7-VII	
Denmark	8121-1077	2.5 m	DK 2-5A	
Switzerland	8121-0916	2.5 m	SEV 6534-2 Type 12	

Country	HP part number	Length	Plug type	Plug
United Kingdom, Middle East	8121-0907	2.5 m	BS 1363/A (13A fused)	
Middle East	8121-6360	2.5 m	NEMA 6-20	
Israel	8121-1010	2.5 m	SI 32	
South Africa	8121-0915	2.5 m	SABS 164	
United States, Canada, Mexico	8120-6360	2.5 m	NEMA 6-20	
Brazil	8121-1101	2.5 m	NBR 14136	
Argentina	8121-0925	2.5 m	IRAM 2073	
Chile, Uruguay	8121-0923	2.5 m	CEI 23-50	
Australia, New Zealand	8120-6351	2.5 m	AS/NZS 3112	

Country	HP part number	Length	Plug type	Plug
India	8121-1074	2.5 m	IS 1293	
China	8121-0924	2.5 m	GB 1002	
Taiwan	8121-1033	2.5 m	CNS 690 Type 2(4)	
Japan	8120-6360	2.5 m	NEMA 6-20P	
Philippines, Thailand	8121-6360	2.5 m	NEMA 6-20P	
Vietnam, Cambodia, Korea, Indonesia	8120-6352	2.5 m	CEE 7-VII	
Singapore, Hong Kong	8121-0907	2.5 m	BS 1363/A (13A fused)	

## 5200 printer series

The printer requires a suitable power supply and power cords.

Input voltage	~100–127/200–240 V ±10%, two wires + PE
Input frequency	50/60 Hz
Maximum load current	10/5 A
Power consumption while printing	0.9 kW

### Wall receptacles and power cords

A power cord is provided with your printer, according to the printer's electrical specifications. Check that you have suitable wall sockets available.

If the power cord does not reach your PDU and/or UPS, a certified electrician must install suitable extension cables on the day of installation.

To make sure you have the right wall socket outlets (wall receptacles) ready for installation, check the following:

1. The wall socket outlets must be accessible to users of the device and within the range of the power cord.
2. The wall socket outlets must be suitable for **printer input ratings**. See [Electrical configuration on page 17](#).
3. The wall socket outlets must be suitable for the **power cord plug type** used in the country of installation. The table below gives examples of the power cords and the plugs provided with the printer according to the country. To make sure you have the right wall receptacle, find your country in the appropriate table and check the **plug type**.

**⚠ WARNING!** Use only use the power cord supplied by HP with the printer. Do not use a power strip (relocatable power tap) to connect both power cords. Do not damage, cut, or repair the power cord. With a damaged power cord, there is risk of fire and electric shock. Always replace a damaged power cord with an HP-approved power cord.

Country	HP part number	Length	Plug type	Plug
EU, Russia	8120-6352	2.5 m	CEE 7-VII	
Denmark	8121-1077	2.5 m	DK 2-5A	
Switzerland	8121-0916	2.5 m	SEV 6534-2 Type 12	

Country	HP part number	Length	Plug type	Plug
United Kingdom, Middle East	8120-0907	2.5 m	BS 1363/A (13A fused)	
Middle East	8121-0917	2.5 m	NEMA 5-15	
Israel	8121-1010	2.5 m	SI 32	
South Africa	8121-0915	2.5 m	SABS 164	
United States, Canada, Mexico	8121-0917	2.5 m	NEMA 5-15	
Brazil	8121-1101	2.5 m	NBR 14136	
Argentina	8121-0925	2.5 m	IRAM 2073	
Chile, Uruguay	8121-0923	2.5 m	CEI 23-50	
Australia, New Zealand	8120-6351	2.5 m	AS/NZS 3112:2000	

Country	HP part number	Length	Plug type	Plug
India	8121-1074	2.5 m	IS 1293	
China	8121-0924	2.5 m	GB 1002	
Taiwan	8121-1033	2.5 m	CNS 690 Type 2(4)	
Japan	8120-6360	2.5 m	NEMA 6-20P	
Philippines, Thailand	8121-6360	2.5 m	NEMA 6-20P	
Vietnam, Cambodia, Korea, Indonesia	8120-6352	2.5 m	CEE 7-VII	
Singapore, Hong Kong	8120-0907	2.5 m	BS 1363/A (13A fused)	

## 5200 printer series with dryer accessory

The printer requires a suitable power supply and power cords.

Input voltage	~200–240 V ±10%, two wires + PE
Input frequency	50/60 Hz
Maximum load current	12 A
Power consumption while printing	2.0 kW

### Wall receptacles and power cords

A power cord is provided with your printer, according to the printer's electrical specifications. Check that you have suitable wall sockets available.

If the power cord does not reach your PDU and/or UPS, a certified electrician must install suitable extension cables on the day of installation.

To make sure you have the right wall socket outlets (wall receptacles) ready for installation, check the following:

1. The wall socket outlets must be accessible to users of the device and within the range of the power cord.
2. The wall socket outlets must be suitable for **printer input ratings**. See [Electrical configuration on page 17](#).
3. The wall socket outlets must be suitable for the **power cord plug type** used in the country of installation. The table below gives examples of the power cords and the plugs provided with the printer according to the country. To make sure you have the right wall receptacle, find your country in the appropriate table and check the **plug type**.

**⚠ WARNING!** Use only use the power cord supplied by HP with the printer. Do not use a power strip (relocatable power tap) to connect both power cords. Do not damage, cut, or repair the power cord. With a damaged power cord, there is risk of fire and electric shock. Always replace a damaged power cord with an HP-approved power cord.

Country	HP part number	Length	Plug type	Plug
Singapore, Hong Kong	8120-0907	2.5 m	BS 1363/A (13A fused)	
Australia	8120-6351	2.5 m	AS/NZS 3112:2000	
India	8121-1074	2.5 m	IS 1293	

Country	HP part number	Length	Plug type	Plug
China	8121-0924	2.5 m	GB 1002	
Taiwan	8121-1033	2.5 m	CNS 690 Type 2(4)	
Japan	8120-6360	2.5 m	NEMA 6-20P	
Philippines, Thailand	8121-6360	2.5 m	NEMA 6-20P	
Vietnam, Cambodia, Korea, Indonesia	8120-6352	2.5 m	CEE 7-VII	

## 4700/4200/3920 printer series

The printer requires a suitable power supply and power cords.

Input voltage	~100–127/200–240 V ±10%, two wires + PE
Input frequency	50/60 Hz
Maximum load current	7/3.5 A
Power consumption while printing	0.7 kW

### Wall receptacles and power cords

A power cord is provided with your printer, according to the printer's electrical specifications. Check that you have suitable wall sockets available.

If the power cord does not reach your PDU and/or UPS, a certified electrician must install suitable extension cables on the day of installation.

To make sure you have the right wall socket outlets (wall receptacles) ready for installation, check the following:

1. The wall socket outlets must be accessible to users of the device and within the range of the power cord.
2. The wall socket outlets must be suitable for **printer input ratings**. See [Electrical configuration on page 17](#).
3. The wall socket outlets must be suitable for the **power cord plug type** used in the country of installation. The table below gives examples of the power cords and the plugs provided with the printer according to the country. To make sure you have the right wall receptacle, find your country in the appropriate table and check the **plug type**.

**⚠ WARNING!** Use only use the power cord supplied by HP with the printer. Do not use a power strip (relocatable power tap) to connect both power cords. Do not damage, cut, or repair the power cord. With a damaged power cord, there is risk of fire and electric shock. Always replace a damaged power cord with an HP-approved power cord.

Country	HP part number *	Length	Plug type	Plug
EU, Russia	8121-0823	3.0 m	CEE 7-VII	
Denmark	8121-0826	3.0 m	DK 2-5A	
Switzerland	8121-0827	3.0 m	SEV 6534-2 Type 12	

Country	HP part number *	Length	Plug type	Plug
UK, Middle East	8121-0824	3.0 m	BS 1363/A (10A fused)	
Middle East	8121-0822	3.0 m	NEMA 5-15	
Israel	8121-1035	2.5 m	SI 32	
South Africa	8121-0919	3.0 m	SABS 164	
United States, Canada, Mexico	8121-0822	3.0 m	NEMA 5-15	
Brazil	8121-1069	2.5 m	NBR 14136	
Argentina	8121-0883	3.0 m	IRAM 2073	
Chile, Uruguay	8121-0825	3.0 m	CEI 23-50	
Australia, New Zealand	8121-0828	3.0 m	AS/NZS 3112:2000	

Country	HP part number *	Length	Plug type	Plug
India	8121-0928	3.0 m	IS 1293	
China	8121-0829	3.0 m	GB 1002	
Taiwan	8121-0965	3.0 m	CNS 690 Type 2(1)	
Japan	8121-0830	3.0 m	JIS C 8303	
Philippines, Thailand	8121-0673	2.5 m	NEMA 5-15P	
Vietnam, Cambodia, Korea, Indonesia	8121-0823	3.0 m	CEE 7-VII	
Singapore, Hong Kong	8121-0824	3.0 m	BS 1363/A (10A fused)	

## F40, F60, and F70 folders

A folder requires a suitable power supply and power cords.

Input voltage	~100–120/200–240 V ±10%
Input frequency	50/60 Hz
Maximum load current	10/5 A
Power consumption while folding	400 W

Wall receptacles and power cords: same as for [4700/4200/3920 printer series on page 29](#).

### Appliance coupler (folder connection)

Appliance coupler (power cable)	Appliance coupler inlet (folder)
Detachable terminal as per IEC60320-1 C13	Detachable inlet as per IEC60320-1 C14
	

## Powerline disturbances

As with all computer and electronic equipment, reliable operation of your printer or high-capacity stacker depends on the availability of relatively noise-free AC power.

- In order to ensure optimum performance and reliability, your device should be protected from variations in line voltage. Lightning, line faults, or the switching of lighting or machinery can generate line transients that far exceed the peak value of the applied voltage. If not reduced, these microsecond pulses can disrupt system operation and damage the device.
- It is recommended to include overvoltage (OVP) and transient protection in the power supply to the device.
- All electrical noise-generating equipment, such as fans, fluorescent lighting, and air-conditioning systems, should be kept separate from the power source used for your device.

## Grounding

The printer and the folder (if any) must be connected to a good-quality ground line in order to avoid electrical risk.

Note your obligation to comply with the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

The following grounding tasks must be fulfilled to meet the site preparation requirements:

- Grounding wires must be insulated and at least equal in size to the phase conductors.
- Ground impedance must be less than 0.5  $\Omega$  or comply with the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

# A Site preparation checklist

The checklist must be completed and returned to your support representative a minimum of two weeks before the day of installation.



**NOTE:** Any delays during installation that are caused by an unprepared site will be charged to the customer. Take care that your site is properly prepared to ensure a smooth and easy installation.

## Safety requirements

	Yes	No	Comments
Do those who will operate the printer have the technical training and experience necessary to be aware of hazards to which they may be exposed in performing a task, and to take appropriate measures to minimize the risks?	<input type="checkbox"/>		(Required)
Is there an emergency exit in the print production area, with easy access and free from any obstruction?	<input type="checkbox"/>	<input type="checkbox"/>	

## Site requirements

	Yes	No	Comments
Have site requirements for installing and using the printer been satisfactorily met?	<input type="checkbox"/>		(Required)
Is there a forklift or other equipment to help with the unpacking?	<input type="checkbox"/>		(Required)

## Electrical installation requirements

	Yes	No	Comments
Is the electrician aware of all requirements and specifications highlighted in this guide?	<input type="checkbox"/>		(Required)
<b>For 3920, 4200, 4700, 5200 printers:</b> Is the single-phase line voltage inside the specified voltage range 100–127 V / 200–240 V $\pm$ 10%?	<input type="checkbox"/>		(Required) Specify nominal mains voltage:
<b>For 5200 with dryer accessory, 8200, and pro printers:</b> Is the single-phase line voltage inside the specified voltage range 200–240 V $\pm$ 10%?	<input type="checkbox"/>		(Required) Specify nominal mains voltage:
Is there a dedicated line to connect the printer's power cord, if required? <b>NOTE:</b> Do not use a power strip (relocatable power tap) to connect the power cord.	<input type="checkbox"/>		(Required)

	Yes	No	Comments
Has a branch circuit breaker (2 poles, 16 A/20 A general) been correctly installed for the line dedicated to the printer?	<input type="checkbox"/>		(Required)
If a folder is installed, has a branch circuit breaker (2 poles, 16 A/20 A general) been correctly installed for the line dedicated to the folder?	<input type="checkbox"/>		(Required)
Has a Residual Current Circuit Breaker (also known as Ground Fault Circuit Interrupter) (2 poles, 30 mA residual, at least 20A capacity) been correctly installed if required or recommended?	<input type="checkbox"/>		(Required)
Is the Power Distribution Unit (PDU) for the printer correctly installed?	<input type="checkbox"/>		(Required)
If a folder is installed, is the Power Distribution Unit (PDU) for the folder correctly installed?	<input type="checkbox"/>		(Required)
Are the grounding conductors properly installed for each wall receptacle (wall socket)?	<input type="checkbox"/>		(Required)
Are the wall receptacles (wall sockets) suitable for the power cord plug type provided by HP?	<input type="checkbox"/>		(Required)
Are the wall receptacles (wall sockets) and electrical installation suitable for the printer's and (if installed) for the folder's rated current? <b>NOTE:</b> See <a href="#">Electrical requirements on page 15</a> for specific information.	<input type="checkbox"/>		(Required)
Are the wall receptacles (wall sockets) placed close enough to the printer—and to the folder, if installed—that the plugs can be plugged and unplugged easily? <b>IMPORTANT:</b> Do not use a power bar or extension power bar.	<input type="checkbox"/>		(Required)

## Electrical configuration requirements

	Yes	No	Comments
Do you need an Uninterrupted Power Supply (UPS) or step-up transformer? If so, is it correctly installed?	<input type="checkbox"/>	<input type="checkbox"/>	

## Networking and computer requirements

	Yes	No	Comments
Are the SmartStream software and the computer on which it will run ready for installation?	<input type="checkbox"/>	<input type="checkbox"/>	
Have network connections been supplied?	<input type="checkbox"/>	<input type="checkbox"/>	
Do you need a proxy server? If so, write down proxy server name and port.	<input type="checkbox"/>	<input type="checkbox"/>	
Do you have a LAN cable long enough to connect the printer to the network?	<input type="checkbox"/>	<input type="checkbox"/>	

## Environmental requirements

	Yes	No	Comments
Have the temperature and humidity requirements been satisfactorily met in the print production area, and is there adequate ventilation or air conditioning?	<input type="checkbox"/>	<input type="checkbox"/>	

	Yes	No	Comments
Have the temperature and humidity requirements been satisfactorily met in the storage area?	<input type="checkbox"/>	<input type="checkbox"/>	
Is the print production area free from dirt and dust?	<input type="checkbox"/>	<input type="checkbox"/>	
Does the print production area have sufficient lighting?	<input type="checkbox"/>	<input type="checkbox"/>	

## Other requirements

	Yes	No	Comments
Have you arranged for supplies such as paper and ink cartridges to be available on the day of installation?	<input type="checkbox"/>	<input type="checkbox"/>	
Have you met the requirements specified in this guide?	<input type="checkbox"/>		(Required)

## Signature

---

Date of site preparation completion

---

Site preparation guide edition number or copyright date

---

Customer signature

---